 




Azpen A720 Back Cover Replacement (Prerequisite)

This pre-requisite guide will go through how to open up the back of the device to expose the inner components. For any replacement or maintenance that will be required to fix issues, this is the first step in the sequence of events.

Written By: Ben

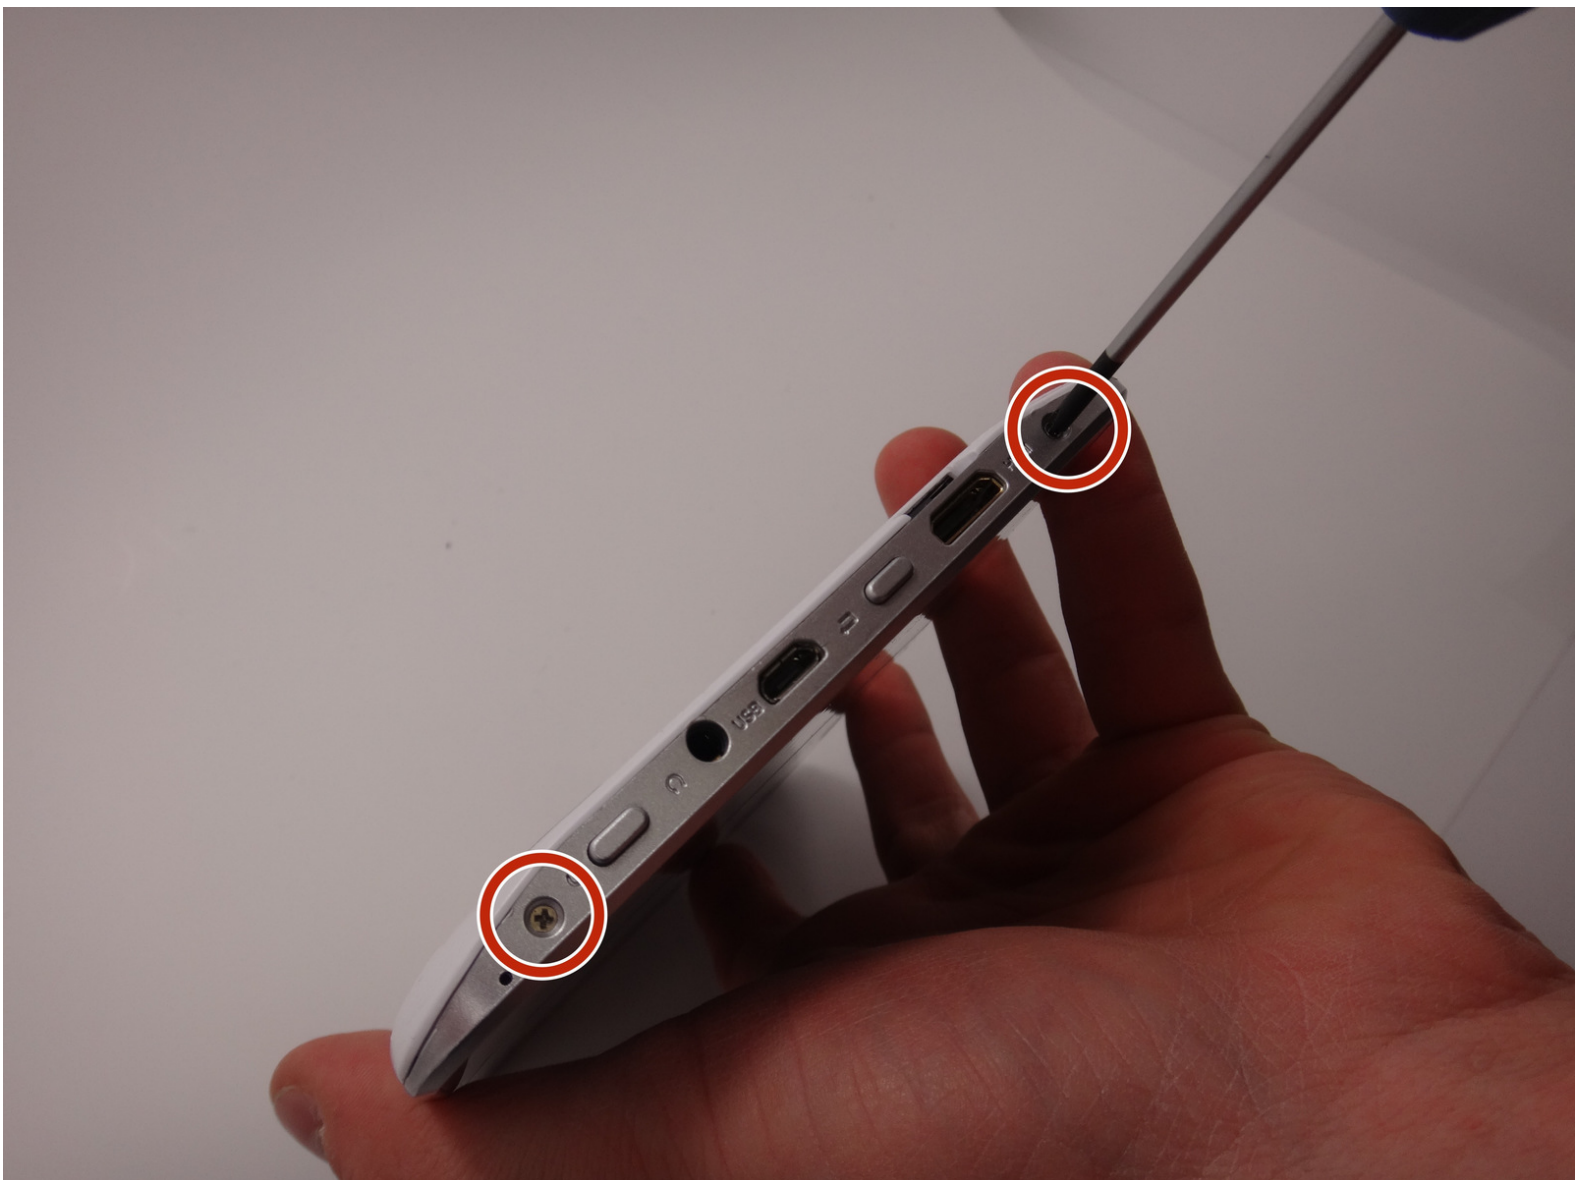

INTRODUCTION

All of the key components that could fail are accessed by removing the back cover. The process will include removing a couple screws and then utilized the plastic opening tools to pry the cover apart from the body of the device.



TOOLS:

 
- [Phillips #00 Screwdriver](#) (1)
 - [Magnetic Project Mat](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Back Cover (Prerequisite)




- Use the Phillips # 00 screwdriver to remove the two 4mm screws found on the top edge of the tablet near the power button and HDMI mini port.

Step 2

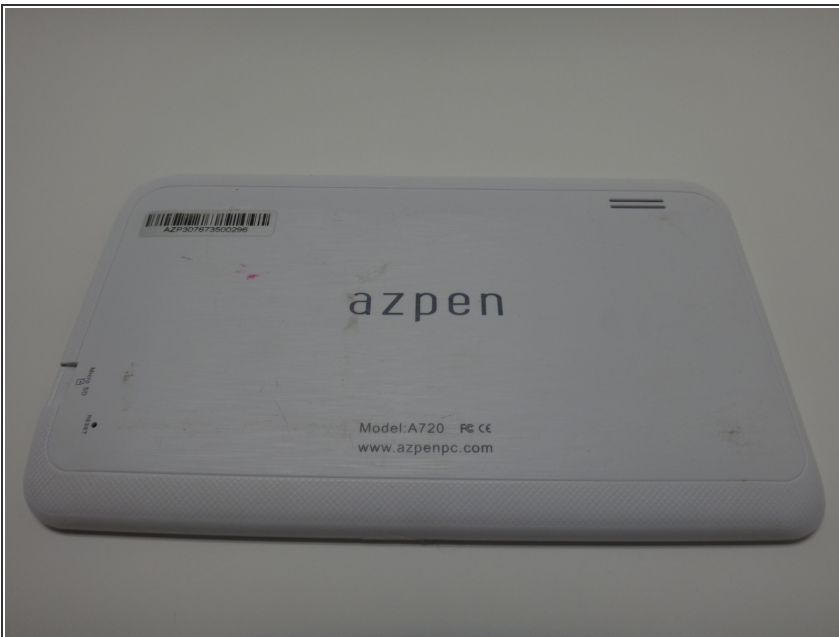

- Lay the tablet screen-side down

Step 3

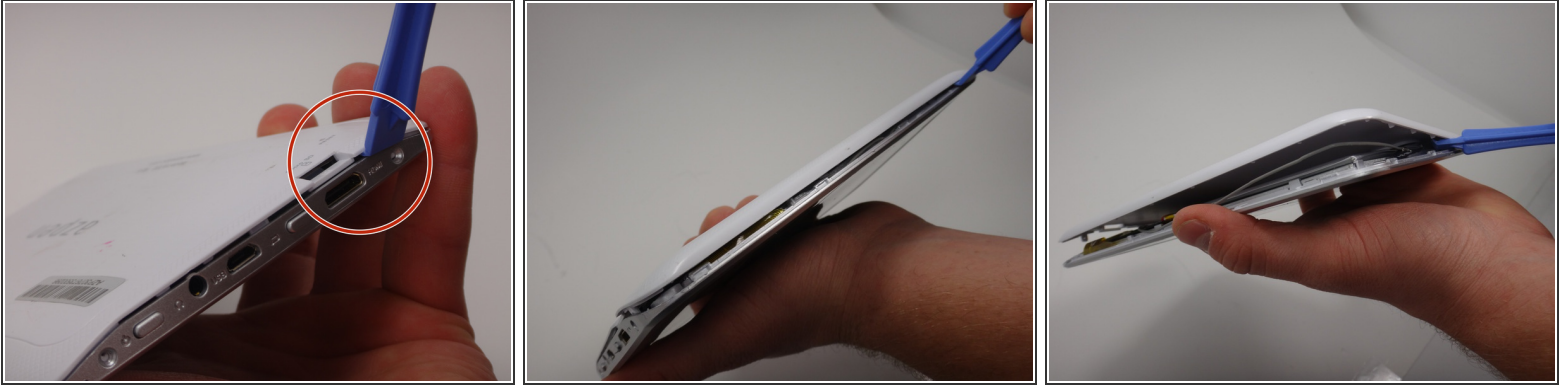

- Use the plastic opening tool to pry the white back from the silver frame. Start near the micro SD slot.
- Slide the plastic opening tool around the perimeter of the casing until the back is disconnected.

Step 4



- Take the cover off your tablet.

Now all of the components are accessible for maintenance

This document was last generated on 2017-06-30 06:19:41 AM.